YP Q50/Q60 LPFP Installation Instructions.

Parts Included

- YP LPFP
- Fuel Filter Sock
- YP Anodized Bracket

Instructions

Removal of the fuel pump unit

1.Remove the rear seat cushion from the vehicle



2.Locate the fuel pump unit which is on the right side of the rear seat and move the cover to the left.

3.Remove the fuel pump wiring harness clip and remove the fuel pump unit cover by removing the bolts



4.Disconnect both Fuel pump wiring harness and the fuel pump pipe from the unit and move the cover to the side.





5.Remove the 6 bolts on the securing ring of the unit and remove the securing ring to the side





6.Pull out the fuel pump unit and when it is half way disconnect the siphon hose








Disassembly of the fuel pump unit

1.Start todisassemble the fuel pump unit.



2.Remove the spring loaded mounting rods retaining collars on both sides. disconnect it.

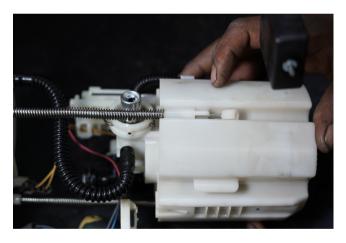


3.To separate the top of the unit disconnect the 3 electrical plugs from the top.








4.Unlock and open the 3 locking assembly from the pump unit

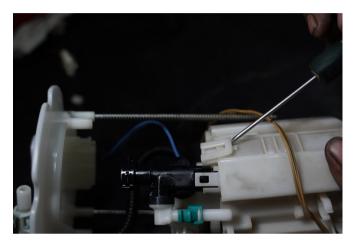

5. Seperate the top and bottom of the fuel pump unit

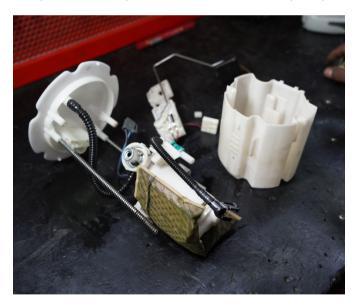

6.Disconnect the fuel pump from the pump assembly and disconnect the electrical wire.










<u>Installation of the YP Fuel Pump</u>

1.Put the O ring from the factory fuel pump assembly to the YP Fuel Pump

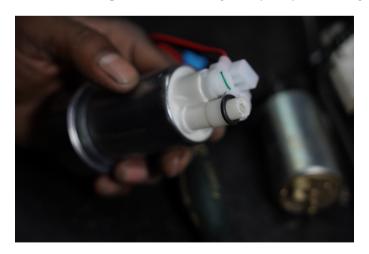

2.Install the YP fuel pump in to the assembly unit





3.Install the new fuel filter sock with the YP bracket to the fuel filter assembly



4.Reconnect the top and bottom fuel filter components and reconnect the electric plugs.
5.Reinstall the fuel pump assembly. This is the reversal of the removal. Please refer above.







6.Enjoy the new upgraded YP Low Pressure Fuel Pump on your Infinity Q50/Q60.