

YP Q50/Q60 Full Downpipes Installation Instructions.

Parts Included

- 2X Full Downpipe 3inch
- 2X Gasket
- 2X Gasket Adapter (2.5 to 3inch)
- 6X Bolts

Instructions

Removal of Catalytic Converter

1. Lift the vehicle up and leave space for working under the car.
2. Disassemble the connecting bolts from the exhaust to the catalytic converter (OEM)



3. Find the downpipe mounting bolts and loosen the bolts, But do not remove it completely as it will support the downpipe until its full removal.
4. Unplug the O2 sensors from the catalytic converter.
5. Remove the O2 sensors from the OEM catalytic converter, handle the O2 sensors with care.
6. Install the O2 sensors on the YPerformance Full Downpipes. Remember to install the O2 sensors on the same side respectively.
7. Remove the support bracket of both of the catalytic converter.
8. Remove the V Band clamp of both of the upper catalytic converter.

Now you can simply take out whole catalytic converters of both sides.


Installation of YP Full Downpipe



1. Install the new YP full downpipes with using the OEM V band clamp.



2. Loosely reinstall the support bracket of the full downpipes, So the downpipes will stay rigid and the v band clamps can be tightened easily.
3. Connect the downpipe to the rest of the exhaust system with YP Gaskets. The Gasket adaptor is to be used if the exhaust is 2.5inch. The downpipe can be connected directly if the exhaust pipe is 2.7-3inch.

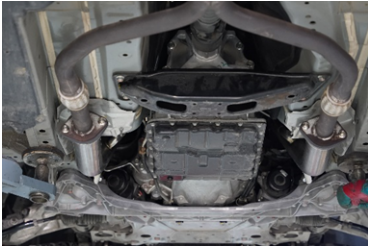

4. Plug in the O2 sensors.
5. Enjoy the YP Full Downpipes!